

XLR

SNIFFER / SENDER

STARTER GUIDE



Congratulations on your new audio life saver!
You can now quickly troubleshoot faulty mic
lines and cables on the fly.

Step 1:

Insert XLR Sniffer and Sender units onto the
ends of your mic line.

Step 2:

The Sender provides power while the Sniffer
instantly diagnosis the cable. All green means
your cable is functioning properly. Anything
else indicates a fault, refer to the color code
sticker to identify the problem.

Your box should include a color code
sticker. Many users find it convient to
attach the sticker to the XLR Sniffer.

Compatible with Phantom Power



Rapidly test snake systems with the XLR Sniffer. Just turn on phantom power from your console and start testing with the Sniffer. The barrel is specially designed to avoid locking so you can quickly test each channel.



The Battery

The unit uses an A23 battery which is located in the Sender. The positive end of the battery should be pointed inwards, away from the cap. Twist the cap to turn the unit on or off.



Robust Aluminum Barrel

The durable robust aluminum barrel will never rust and protects the inner workings and solder joints.